

**WIRED / WIRELESS IP CAMERA
(MODEL NO.:IP607/IP607W)**

USER MANUAL V1.0



CATALOGUE

1.DESCRIPTION OF PRODUCT -----	1
1.1 Packing -----	2
1.2The Lowest System Configuration-----	2
1.3 Features -----	2
2. INSTALLATION OF IP607W-----	3
2.1 Installation Preparation-----	3
2.2 hardware installation-----	3
2.3software installation-----	3
3.CONFIGURATION OF IP607W-----	4
3.1 get ip address of ip607w in internal network-----	4
3.2.Software Edition Update-----	5
3.3.Login the configuration page of ip607w-----	6
3.4.real-time monitoring on interface operation-----	6
3.4.1.Visitor Operating-----	6
3.4.2. Operator Operating-----	7
3.5.Administrator operating-----	7
3.5.1.Device Information-----	7
3.5.2.Device Name Settings-----	7
3.5.3.Device Clock Settings-----	8
3.5.4.Device User Settings-----	8
3.5.5.Multi-Channel Device Settings-----	8
3.5.6.Basic Network Settings-----	9
3.5.7.Wireless LAN Setting-----	9
3.5.8.ADSL Settings-----	9
3.5.9.UPnP Settings-----	10
3.5.10.Dynamic Domain Name Settings-----	10
3.5.11.Mail Service Settings-----	10
3.5.12.Service Settings-----	10
3.5.13.Alarm Service Settings-----	11
3.5.14. System Software Upgrade-----	11
3.5.15. Restore Factory Default Settings-----	11
3.5.16.Device Reboot-----	12
3.5.17.Return-----	12
4. IP607W HOW TO VIEW IP607W-----	12
4.1 LAN VIEW-----	12
4.2 INTERNET VIEW-----	13
4.2.1Internet Connect Internet by ADSL directly-----	13
4.2.2.Internet Connect Internet by LAN-----	14
5. TECHNICAL PARAMETER-----	16
5.1.Key Function-----	16
5.2.Key Parameter-----	16
6. APPENDIX-----	17

THE 1ST CHAPTER DESCRIPTION OF PRODUCT

1.1 PACKING

Packing in detail as follow (If find any missing parts , please contact your supplier immediately):

- 1、IP607W, Bracket
- 2、Driver
- 3、Power Adapter
- 4、B-B Network Cable

Description of IP607W, please refer to Picture 1.1 and 1.2



(Picture 1.1)



(Picture 1.2)

1.2 THE LOWEST SYSTEM CONFIGURATION

The lowest system configuration of your PC when use this IP camera

1. Pentium III CPU or above, 1GHz frequency or higher
2. 256M built-in memory or above
3. 10M network card or above
4. Operating System: Windows XP, Windows 2000 or above;
Install internet explorer 4.0(or above) browser, we suggest you to use internet explorer 6.0/7.0
Browser for view.

1.3 FEATURES

Easy installation—IP607W is an independent system, with built-in CPU and picture decoder; Just one power adapter and LAN connection can make it work.

Suitable for home, office and public place---No matter monitoring of home, office or public place, or for amusement only, this IP camera can match your needs Support multiform protocols---TCP/IP network protocol,

SMTP protocol, HTTP protocol and other protocols related to internet.

Simple configuration---with standard Web browser in administrator interface. Administrator can control and manage IP camera by LAN or Internet.

Viewing/Recording--- clear user interface to view real-time pictures. Even when you leave for a while, IP607W will record the pictures and transfer files to your PC. Files will be saved in the form of standard windows media, suitable for extensive application program.

Dynamic Monitoring---capturing any tiny pictures and send to your mail box. IP607W will automatically compare the two continuous pictures and find out the changes caused by moving.

Support DDNS---In order to view the pictures by internet, users must know the gateway IP address when using IP607W. However, if your gateway IP address is dynamic, you must have dynamic domain server. As usual, many of the gateway don't support dynamic domain service, So it is limited when using IP607W.

User management---If require, only authorized users can view real-time video, and before that, users must enter their user names, passwords. Maximum users: 8 persons The 2nd Chapter

INSTALLATION OF IP607W

Quickly view the installation manual, after finishing the procedures step by step, IP607W will work accordingly. IP607W can be used in LAN, you will find the IP address in LAN by carrying out IP Camera Tool program on PC, then input this IP address into the IE browser address field (such as http://192.168.1.100/), so it can connect. IP607W and camera interface can be shown on browser page. For external network visit, a prior suitable configuration of IP camera in LAN is required, please refer to the instructions in the following chapters.

2.1 INSTALLATION PREPARATION

Please make sure you have already read the user manual carefully and know well about the functions and configurations of IP607W before installation. Then, use the enclosed network cables to connect IP607W to Internet, via router or switch. Please prepare the router and switch by yourself.

2.2 HARDWARE INSTALLATION

This part is for introducing how to finish hardware installation and physical connection of IP607W. After it, please connect power supply, IP607W will start work and the indicator light will shine.

1. Install the IP camera at the place where monitoring required.

2. connect network

Connect IP camera with hub (10 / 100M) or switch (10 / 100M), insert one end of the network cable into RJ45 port, the other end into router or switch. Indicator light at RJ45 port will flash under normal condition

3. connect to the power supply

Please use the enclosed power adapter in package to connect the IP camera and power supply, otherwise you will damage the hardware



- Note!**
1. Make sure the length of the network cable is within validity range, If over 100M, Please use signal amplifier.
 2. Please use the power adapter we supply, otherwise you will damage the hardware.
 3. If you connect PC to IP607W directly, please make sure the crossover cable is used.


4. check LED light

After connect to the power supply, IP camera will start work and the small yellow light at the back of it will shine. In dark condition, you will see the light at the front of camera. Four infrared lights will be as lamp-house to let you see clear picture in dark.

2.3 SOFTWARE INSTALLATION


Please use the enclosed IPCAMSETUP.EXE software to start initial installation on your PC. After it, IP Camera Tool will search all IP addresses of IP607W in the same network space automatically.

1. Please use the enclosed driver, then you will see the welcome interface of installation program.
2. Introduction interface of installation will be shown. After read it, press "Next" to continue installation. Please refer to Picture 2.4

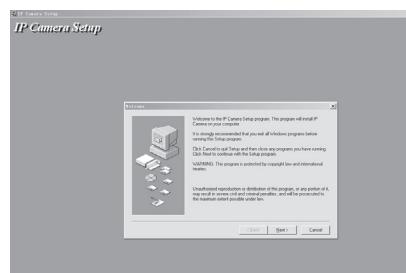


Picture 2.4: Installation interface 1

3. Installation guidance will help you to finish the installation. Please press "NEXT" buttons in turn, please refer to Picture 2.5

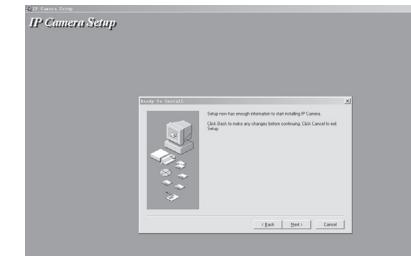

Picture 2.5: continue the installation

4. When finish the installation, please restart your computer. Please refer to Picture 2.6 .

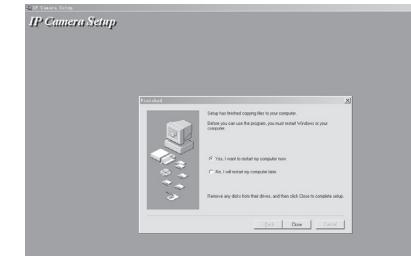

Picture 2.6 : finish installation

THE 3RD CHAPTER CONFIGURATION OF IP607W

After finish the 2nd chapter, IP607W can work in LAN. We can find the IP address of IP607W by IP camera Tool program and visit IP607W by browser. (input IP address and port number of IP607W into the IE browser address field, such as "http://192.168.1.112:100", then press "enter". If the port number is 80, then you can input IP address http://192.168.1.112 directly, without port number). Please note that our factory default setting of the port number is 80.

Now we can configure IP607W by operating web configuration page . If you want to view the monitoring picture by browser, or to operate IP607W web configuration page, you should know the IP address and port number of IP607W.

We supply IP Camera Tool Program, which is used for searching IP address and port number of IP-607W in LAN only (both IP607W and our PC are in the same network space), but not for searching IP address and port number of IP607W in external network(IP607W and our PC are not in the same network space). If we want to visit IP607W through external network, we must configure IP607W in LAN at first.

About how to make a external network visit or detail information of setup, please refer to the following descriptions.

3.1 GET IP ADDRESS OF IP607W IN INTERNAL NETWORK

Please pay attention to the below instruction before getting IP address

- ke sure the device has connected to the power supply and network connection is correct
- he LAN or PC should support DHCP(Dynamic IP Distribution), because the IP camera has been set up to get dynamic IP address; if no this function, you will not search out the camera (Please refer to the dialog box for operation)




1. **IP Camera Tool** double press IP Camera Tool.

2. As the following dialog box on PC: You will see the IP address after more than 10 seconds, if camera connect to the power supply just for a minute.



3. If the camera is not in the same network space, please do as followed:

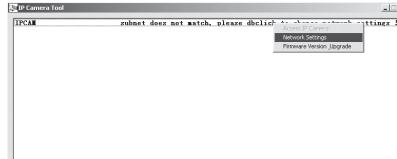

Click the left button of the mouse to choose the prompts and click right button to select the related items, as shown below:




make a manual change as the picture shown :



Please do not choose "automatically get IP", if your LAN or PC doesn't support DHCP. You can set up the camera IP address according to the network space of LAN or PC, but it should be different from that of other devices or PC in the same network space(the first 3 items and subnet mask should be same) . You can change the port setting on the page only.

Please choose "automatically get IP", if your LAN or PC supports DHCP.

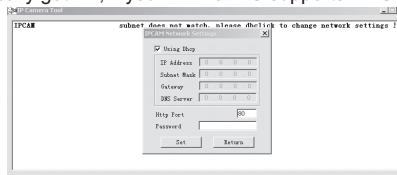

3.2 SOFTWARE EDITION UPDATE

IP607W supports the upgrade of system software and application software, application software applicable for interface upgrade.




3.3. LOGIN THE CONFIGURATION PAGE OF IP607W

If input the IP address of IP607W into the IE browser address field and press "Enter", or directly double press the listed IP address in the dialog box of IP Camera Tool, IE browser will be start up automatically and the administrator login window will also appear.

Input the user name, password (the defaulted user name: admin, the defaulted password : leave it blank), click "sign in" to view the monitoring page (supports synchronous view of maximum 8 users).




3.4 REAL-TIME MONITORING

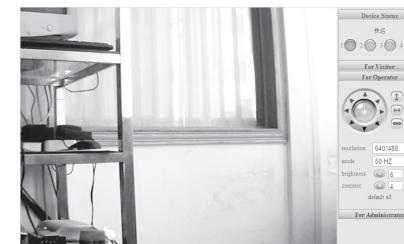

(Control Area)

Notice: If no picture shown for the first-time use, you can set the user-defined security grade of option "Internet" of IE browser: namely, unsigned control can be set up as the status of "startup/prompt"

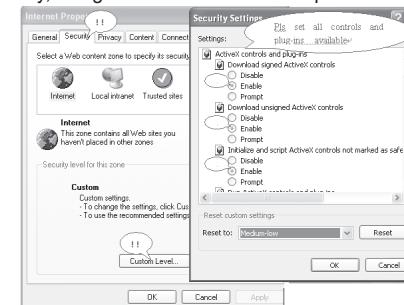

3.4.1 Visitor Operating

working status for each channel as followed:



For example: channel 1 is monitoring (motion detection status) if is flickering.

Click the right key for 4-picture view .

Video on/ off .

Recording: press to save the recording files through appointed path.

Take picture: press to capture and save pictures through appointed path.

Green button: normal connection & display

Gray button : connection unavailable

Red button: camera alarms (motion detection alarm)

3.4.2 OPERATOR OPERATING

Press **For Operator**, to set up following parameters

PTZ control



Resolution: GA (640 X 480) / QVGA(320 X 240)

resolution	640*480
	320*240
mode	640*480
working mode: 0Hz/60Hz/outdoor	
mode	50 Hz
brightness	50 Hz
contrast	60 Hz
	outdoor

photo parameters:

brightness	[+]	6	[-]
contrast	[+]	4	[-]

Press **[+]** or **[-]** to adjust the brightness or contrast.

3.5 ADMINISTRATOR OPERATING

Press **For Administrator**, to enter into administrating page.

Device Info
Device ID: 000CD404007
Device Firmware Version: 0.4.1.12
Device Embedded Web UI Version: 0.0.1.10
Device Info
Device Alias
Alias Settings
Date&Time Settings
User Settings
Multi Device Settings
Basic Network Settings
Wireless Lan Settings
ADSL
UPnP Settings
DDNS Service Settings
Email Service Settings
Ftp Service Settings
Alarm Service Settings
Upgrade Device Firmware
Restore Factory Settings
Reset Device
Back

3.5.1 DEVICE INFORMATION

Click **Device Info**, please refer to the following picture:

Device Info
Device ID: 000CD404007
Device Firmware Version: 0.4.1.12
Device Embedded Web UI Version: 0.0.1.10
Device Info
Device Alias
Alias Settings
Date&Time Settings
User Settings
Multi Device Settings
Basic Network Settings
Wireless Lan Settings
ADSL Settings
UPnP Settings
DDNS Service Settings
Email Service Settings
Ftp Service Settings
Alarm Service Settings
Upgrade Device Firmware
Restore Factory Settings
Reset Device
Back

The sequence number of the device: our factory sequence number.

Edition of system firmware of device: edition of system software of IP606W

Edition of application firmware of device: edition of application software of IP607W

3.5.2 DEVICE NAME SETTINGS

Click **Alias Settings**, please refer to the following picture:

Alias Settings
alias: anonymous
Submit Refresh
Device Info
Device Alias
Alias Settings
Date&Time Settings
User Settings
Multi Device Settings
Basic Network Settings
Wireless Lan Settings
ADSL
UPnP Settings
DDNS Service Settings
Email Service Settings
Ftp Service Settings
Alarm Service Settings
Upgrade Device Firmware
Restore Factory Settings
Reset Device
Back

Name : set up the name for the camera

3.5.3 DEVICE CLOCK SETTINGS

Click **Date&Time Settings**, please refer to the following picture:

Device Clock Time: 2008-04-18 12:12:59 (GTM)
Device Clock Timezone: Greenwich mean time: London, Lisbon, Dublin
Sync with NTP Server: checked
Ntp Server: time.nist.gov
Sync with PC Time: unchecked
Submit Refresh
Device Info
Device Alias
Alias Settings
Date&Time Settings
User Settings
Multi Device Settings
Basic Network Settings
Wireless Lan Settings
ADSL Settings
UPnP Settings
DDNS Service Settings
Email Service Settings
Ftp Service Settings
Alarm Service Settings
Upgrade Device Firmware
Restore Factory Settings
Reset Device
Back

3.5.4 DEVICE USER SETTINGS

Click **Users Settings**, please refer to the following picture:

User: admin	Password:	Group: Administrator
User: visitor	Password:	Group: Visitor
User: visitor	Password:	Group: Visitor
User: visitor	Password:	Group: Visitor
User: visitor	Password:	Group: Visitor
User: visitor	Password:	Group: Visitor
User: visitor	Password:	Group: Visitor
User: visitor	Password:	Group: Visitor
Submit Refresh		
Device Info		
Device Alias		
Alias Settings		
Date&Time Settings		
User Settings		
Multi Device Settings		
Basic Network Settings		
Wireless Lan Settings		
ADSL Settings		
UPnP Settings		
DDNS Service Settings		
Email Service Settings		
Ftp Service Settings		
Alarm Service Settings		
Upgrade Device Firmware		
Restore Factory Settings		
Reset Device		
Back		

IP607W can set up maximum 8 users and permissions

3.5.5 MULTI-CHANNEL DEVICE SETTINGS

Click **Multi-Device Settings**, please refer to the following picture:

Device List in Lan: anonymous(192.168.1.22)
The 1st Device: This Device
The 2nd Device: None
The 3rd Device: None
The 4th Device: None
attention: If you want to access the device from internet, be sure the host and port that you set can be accessed from internet.
Submit Refresh
Device Info
Device Alias
Alias Settings
Date&Time Settings
User Settings
Multi Device Setting
Basic Network Settings
Wireless Lan Settings
ADSL Settings
UPnP Settings
DDNS Service Settings
Email Service Settings
Ftp Service Settings
Alarm Service Settings
Upgrade Device Firmware
Restore Factory Settings
Reset Device
Back

For example: add the 2nd channel image


Click **The 2nd Device**, please refer to the following picture:

Device List in Lan: anonymous(192.168.1.22)
The 1st Device: This Device
The 2nd Device: None
Host:
Hip Port:
User:
Password:
Add Remove
The 3rd Device: None
The 4th Device: None
attention: If you want to access the device from internet, be sure the host and port that you set can be accessed from internet.
Submit Refresh
Device Info
Device Alias
Alias Settings
Date&Time Settings
User Settings
Multi Device Settings
Basic Network Settings
Wireless Lan Settings
ADSL Settings
UPnP Settings
DDNS Service Settings
Email Service Settings
Ftp Service Settings
Alarm Service Settings
Upgrade Device Firmware
Restore Factory Settings
Reset Device
Back

Device List in Lan: anonymous(192.168.1.22)
The 1st Device: This Device
The 2nd Device: None
Host: 192.168.1.22
Hip Port: 80
User: admin
Password:
Add Remove
The 3rd Device: None
The 4th Device: None
attention: If you want to access the device from internet, be sure the host and port that you set can be accessed from internet.
Submit Refresh
Device Info
Device Alias
Alias Settings
Date&Time Settings
User Settings
Multi Device Settings
Basic Network Settings
Wireless Lan Settings
ADSL Settings
UPnP Settings
DDNS Service Settings
Email Service Settings
Ftp Service Settings
Alarm Service Settings
Upgrade Device Firmware
Restore Factory Settings
Reset Device
Back

IP CAM的Host, Http Port, User, Password

Input the Host ,Http Port, User, Password, Click **Add**,then **Submit**,and then **Back** to switch to 4-picture monitoring mode, as following:

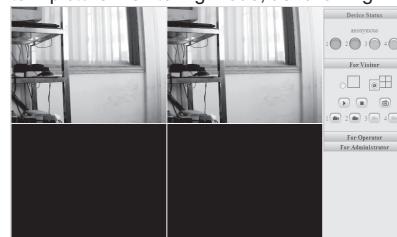

3.5.6 BASIC NETWORK SETTINGS

Click **Basic Network Settings**, please refer to the following picture. For example, the IP address of this device can be set up as follows:

Obtain IP from DHCP Server	<input checked="" type="checkbox"/>
IP Addr	192.168.1.22
Subnet Mask	255.255.255.0
Gateway	192.168.1.1
DNS Server	202.96.134.133
Http Port	80
Submit Refresh	

Please set up IP address, subnet mask, gateway, DNS server well. Dynamic IP setting also available

Obtain IP from DHCP Server	<input checked="" type="checkbox"/>
Http Port	80
Submit Refresh	

Please choose and click **Submit** for confirmation.

3.5.7 WIRELESS LAN SETTINGS

Click **Wireless Lan Settings**, please refer to the following picture. If WIFI is required, please set it up as follows:

Using Wireless Lan	<input checked="" type="checkbox"/>
SSID	TP-LINK_8200E
Encryption	None
Submit Refresh	

Please choose and click **Submit** for confirmation.

3.5.8 ADSL SETTINGS

Click **ADSL Settings**, please refer to the following picture, with the purpose of connecting ADSL.

Using ADSL Dialup	<input checked="" type="checkbox"/>
ADSL User	
ADSL Password	
Report ADSL IP by Mail	<input checked="" type="checkbox"/>
Submit Refresh	

3.5.9 UPNP SETTINGS

Click **UPnP Settings**, please refer to the following picture. It is unnecessary If the router does not have this kind of function.

Using UPnP to Map Port	<input checked="" type="checkbox"/>
UPnP Status	UPnP Failed Errors in Chat with UPnP Device
Submit Refresh	

Device Info
Alias Settings
Date&Time Settings
User Settings
Multi Device Settings
Basic Network Settings
ADSL Settings
UPnP Settings
DDNS Service Settings
Mail Service Settings
Ftp Service Settings
Alarm Service Settings
Upgrade Device Firmware
Restore Factory Setting
Reboot Device
Back

3.5.10 DYNAMIC DOMAIN NAME SETTINGS

Click **DDNS Service Settings**, please refer to the following picture:

DDNS Service	DynDns.org[dyndns]
DDNS User	
DDNS Password	
DDNS Host	
DDNS Status	No Action
Re-Update Ignoring All Errors	serve as this address your hostname has been updated
Submit Refresh	

Device Info
Alias Settings
Date&Time Settings
User Settings
Multi Device Settings
Basic Network Settings
Wireless Lan Settings
ADSL Settings
UPnP Settings
DDNS Service Settings
Mail Service Settings
Ftp Service Settings
Alarm Service Settings
Upgrade Device Firmware
Restore Factory Setting
Reboot Device
Back

DDNS Service: Fill in the web address for applying the domain name
DDNS User: Fill in the domain name

DDNS Password: Fill in the password of the domain name

DDNS Domain Name: DDNS domain name will automatically get the IP if connect well.

DDNS Status: Display the status of connecting the domain name

It will be necessary to set up this function if you want to make a visit through Internet.

Please choose and click **Submit** for confirmation

3.5.11 MAIL SERVICE SETTINGS

Click **Mail Service Settings**, please refer to the following picture:

Sender	zhang@21cn.com
Receiver 1	limeng@21cn.com
Receiver 2	zhang@21cn.com
Receiver 3	zhang@102.163.com
Receiver 4	Fang@watch.com
SMTP Server	smtp.21cn.com
Need Authentication	<input checked="" type="checkbox"/>
SMTP User	zhang
SMTP Password	*****
Submit Refresh	

Device Info
Alias Settings
Date&Time Settings
User Settings
Multi Device Settings
Basic Network Settings
Wireless Lan Settings
ADSL Settings
UPnP Settings
DDNS Service Settings
Mail Service Settings
Ftp Service Settings
Alarm Service Settings
Upgrade Device Firmware
Restore Factory Setting
Reboot Device
Back

This is with mail alarm function: if any movement was detected, it will send message to the email box which we have set up.

Sender: Fill in the e-mail address of senders

Receiver: Fill in the e-mail address of the receiver (4 receivers' e-mails can be set up synchronously)

SMTP Server: Fill in the server address of the sender's e-mail

SMTP User : Fill in the user name of the sender's e-mail

SMTP Password: Fill in the password of the sender's e-mail

This function can be effected only if the camera has been connected to Internet; It is necessary that the newly-revised password will be same as the e-mail password .

3.5.12 FTP SERVICE SETTINGS

Click **Ftp Service Settings**, please refer to the following picture:

FTP Server	
FTP Port	
FTP User	
FTP Password	
FTP Upload Folder	PORT
FTP Mode	<input checked="" type="checkbox"/>
Upload Image Now	<input checked="" type="checkbox"/>
Upload Interval (Seconds)	5
Submit Refresh	

Device Info
Alias Settings
Date&Time Settings
User Settings
Multi Device Settings
Basic Network Settings
Wireless Lan Settings
ADSL Settings
UPnP Settings
DDNS Service Settings
Mail Service Settings
Ftp Service Settings
Alarm Service Settings
Upgrade Device Firmware
Restore Factory Setting
Reboot Device
Back

This function is to upload the pictures to the Internet.

Upload Image Now

FTP Server: Fill in the web site to be uploaded

FTP Port: Fill in the FTP Port

FTP User: Fill in the FTP user name

FTP Password: Fill in the password of the FTP user

FTP Upload Folder: Fill in the file name to be uploaded

FTP Mode: Select PORT

Upload Image Now: Click it if needed

Upload Interval: setup the interval; Unit : second

3.5.13 ALARM SERVICE SETTINGS

Click **Alarm Service Settings**, please refer to the following picture:

Alarm Service Settings	
Motion Detect Armed	<input type="checkbox"/>
Alarm Input Armed	<input type="checkbox"/>
Submit Refresh	
Device Info Alarm Settings Date/Time Settings User Settings Multi Device Settings Basic Network Settings Wireless Lan Settings ADSL Settings UPnP Settings DDNS Service Settings Mail Service Settings Ftp Service Settings Alarm Service Settings Upgrade Device Firmware Restore Factory Settings Reboot Device Back	

Select the alarm mode. For example, if select motion detection mode, you can refer to the following pictures:

Alarm Service Settings	
Motion Detect Armed	<input checked="" type="checkbox"/>
Alarm Input Armed	<input type="checkbox"/>
IO Linkage on Alarm	<input type="checkbox"/>
Send Mail on Alarm	<input type="checkbox"/>
Upload Image on Alarm	<input type="checkbox"/>
Submit Refresh	
Device Info Alarm Settings Date/Time Settings User Settings Multi Device Settings Basic Network Settings Wireless Lan Settings ADSL Settings UPnP Settings DDNS Service Settings Mail Service Settings Ftp Service Settings Alarm Service Settings Upgrade Device Firmware Restore Factory Settings Reboot Device Back	

Select Alarm Mode by yourself: IO linkage, or e-mail sending, or image upload
Following information is an example for selecting the method of email sending:

Alarm Service Settings	
Motion Detect Armed	<input type="checkbox"/>
Alarm Input Armed	<input type="checkbox"/>
IO Linkage on Alarm	<input type="checkbox"/>
Send Mail on Alarm	<input checked="" type="checkbox"/>
Upload Image on Alarm	<input type="checkbox"/>
Upload Interval (Seconds)	1
Submit Refresh	
Device Info Alarm Settings Date/Time Settings User Settings Multi Device Settings Basic Network Settings Wireless Lan Settings ADSL Settings UPnP Settings DDNS Service Settings Mail Service Settings Ftp Service Settings Alarm Service Settings Upgrade Device Firmware Restore Factory Settings Reboot Device Back	

Click **Submit** for confirmation.

3.5.14 SYSTEM SOFTWARE UPGRADE

Click **Upgrade Device Firmware**, please refer to the following picture:

Upgrade Device Firmware	
Upgrade Device Firmware	<input type="checkbox"/>
Upgrade Device Embedded Web UI	<input type="checkbox"/>
Device Info Alarm Settings Date/Time Settings User Settings Multi Device Settings Basic Network Settings Wireless Lan Settings ADSL Settings UPnP Settings DDNS Service Settings Mail Service Settings Ftp Service Settings Alarm Service Settings Upgrade Device Firmware Restore Factory Settings Reboot Device Back	

3.5.15 RESTORE FACTORY DEFAULT SETTINGS


Click **Restore Factory Settings**, and re-start the device, the factory default settings can be restored accordingly.

3.5.16 DEVICE REBOOT

Click **Reboot Device**, it will re-start the device, but former settings unchanged.

3.5.17 RETURN


Click **Back**, it will return to the monitoring interface.

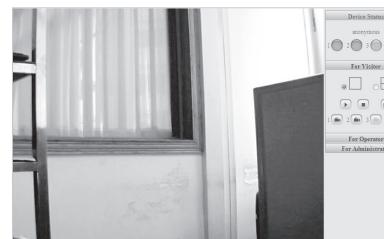

THE 4TH CHAPTER HOW TO VIEW IP606W

After adjust IP607W on the Web page, you can visit it through Internet accordingly. This will be divided into two conditions: LAN View and Internet View. And about Internet View, it will be divided into the modes of dynamic connection and static connection, on the basis of IP607W's connection method with Internet

4.1 LAN VIEW

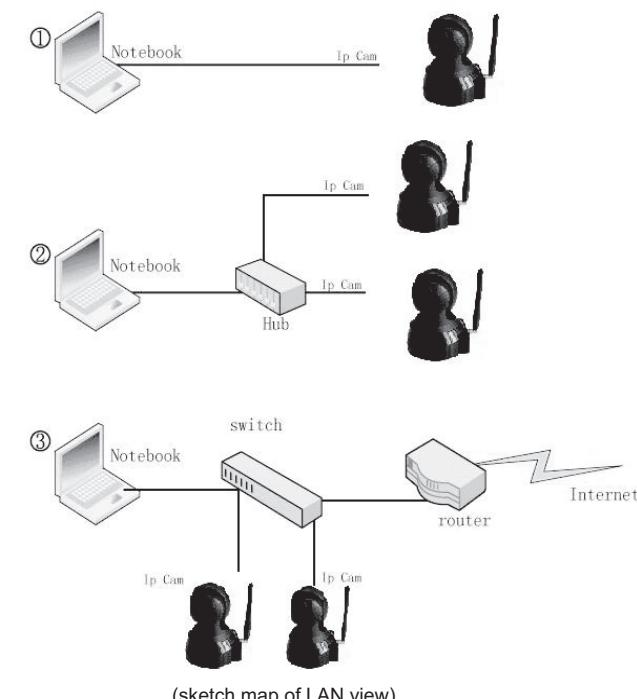

Under this mode, PC and IP607W is in the same LAN, both of them can be connected with each other by network cable, or hub, or switch. IP address is a private one (like 192.168.1.*), subnet mask: 255.255.255.0.



1. if you choose the connection like 4.1.① (in sketch map of LAN view), please make sure you will use crossover cable; if not, you can not connect it to your IP607W normally.
2. Hub and switch in picture 4.1.② and ③ (in sketch map of LAN view), can replace each other, there is no difference!

Firstly, finish the installation of IP Camera Tool as the steps above-mentioned (anyway, you should have to install the IP Camera Tool well at first, then you can find the IP address, and make the other advanced operations)

view via "IP camera tool"


After run IP Camera Tool of IP607W, it will search the IP607W in LAN automatically and show IP address and name on the window, you just need to double click this IP address, then PC will display IE browser window and the login interface, input user and password, you can enter into monitoring page for view. Please remember the IP address, it is surely required if you hope to use web browser for view.

Input IP address into IE browser address field for direct view

Input the IP address and port number of IP607W into IE browser address field, click "enter", input account no. and relative password, then you can see images on web,

Note: if port no. is 80, you can input IP address directly!

4.2 INTERNET VIEW

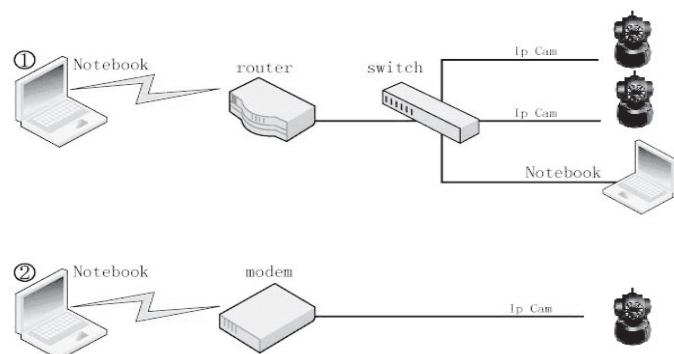


4.2 IP607W PICTURE 4.2 VIEW FROM INTERNET

When PC and IP camera is not in the same network space, it is set at the two ends of internet, show as picture 4.2, this requires to set up IP607W correctly, based on the connection method between IP607W and Internet

4.2.1 CONNECT INTERNET THROUGH ADSL DIRECTLY

When IP607W connects to internet through the dial-up of ADSL (show as follows), its IP address is dynamic and changeable. Every connection to Internet via the dial-up of ADSL, IP camera will get a temporary and different IP address from ISP

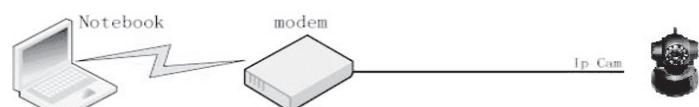

For this case, we can fill ADSL's user name and password on IP607W interface, and choose the option of "use dial-up of ADSL for connection", and the option of "use email to inform ADSL's IP address", picture as below.

ADSL Settings	
Using ADSL Dialup	<input checked="" type="checkbox"/>
ADSL User	XXXXXXXX
ADSL Password	*****
Report ADSL IP by Mail	<input checked="" type="checkbox"/>
<input type="button" value="Submit"/> <input type="button" value="Refresh"/>	

When camera is powered, the dial-up of ADSL will automatically run to connect Internet, ISP will assign a dynamic IP address to the camera while send this address to user by email. User can use IP address and port no. to visit IP camera and monitor the images, via IE browser.

As the IP address of Internet is changeable, namely, ISP will assign a new IP address to router for each dial-up, obviously it is not easy for users to remember it. So, we can make use of DDNS to bind the IP address with a domain name together, which is applied by user and easy to remember, then it becomes simple for us to input domain name and port no. in browser.


How to use DDNS

1. Register DDNS service with the supplier, then you will get a domain name, together with an account and a password.
2. Input correct DDNS settings on the page of IP607W
3. When the Internet IP address is changed, IP607W will connect to DDNS server automatically, advising itself the new IP address.
4. User only need to input domain name assigned by DDNS server into IE browser address field, browser will connect IP607W automatically.



1. you need to apply for this service at DDNS server.
2. you need to operate as DDNS service supplier says

4.2.2 CONNECT INTERNET BY LAN

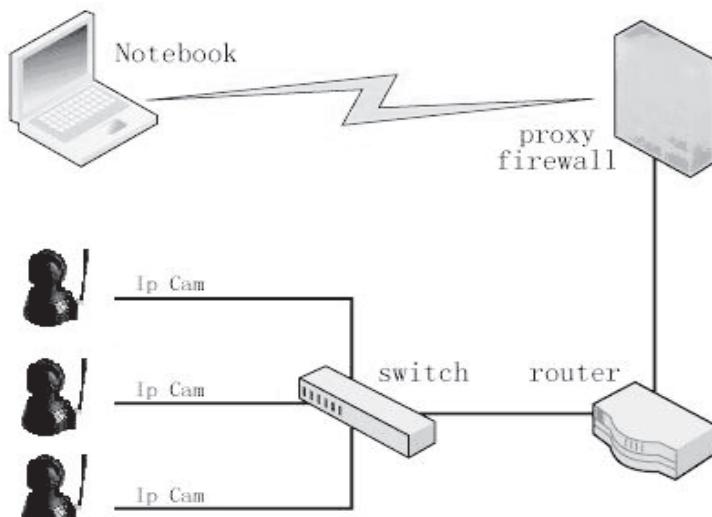

1.Picture 4.5 IP607W use static IP address to connect Internet

Under this mode, the network where IP607W exists use the dial-up of ADSL or other ways to connect Internet, and the whole LAN share the same external IP address, IP cameras in LAN can be differentiated by port Numbers.

With this connection and to visit IP607W via internet, some necessary setup on IP camera and router will be required:

You need to set up IP address of IP607W as static one, and also set up the port number, for example, the static address of IP_cam1,IP_cam2 is respectively "192.168.1.101", "192.168.1.102", port number is 81, 82

2. Open your router, find port transfer page(some routers named dummy service), make the rules for the port transfer, and please remember the port no. of IP607W after It is assigned

3. After finish the settings of IP607W, input the external IP address in Internet of the router and corresponding port numbers of IP607W into the browser at PC end, then you can view the picture.

For example: as picture 4.5, the external IP address in Internet of router is 219.134.248.11, IP address in LAN is 192.168.1.1(gateway address),static IP address of IP607W_1 is 192.168.1.101, port number is 81, static IP address of IP607W_2 is 192.168.1.102, port No. is 82. Set up the port transfer of the router as follows:

camera	transfer port	start port	IP address
IP607W-1	81	81	192.168.1.101
IP607W-2	82	82	192.168.1.102

When user input http:// 219.134.248.11: 81 on PC, router receives application and automatically transfers to 192.168.1.101, after that, IP607W 1 and PC will be connected together, then user can view IP camera through the browser on PC.

Similarly, we need to know and remember the IP address in Internet of the whole LAN, as below picture, IP address in Internet is "219.134.248.11", this address can open router page.



THE 5TH CHAPTER TECHNICAL PARAMETER

5.1 KEY FUNCTIONS

- Support UPNP protocol, can penetrate the gateway automatically,
- easily plug and play.
- Support DDNS service
- Support IE browse
- Dynamic IP address distribution
- Bidirectional voice

5.2 KEY PARAMETERS

Image Compression Format	M-JPEG
Sensor	CMOS,1/4"
Image Resolution	VGA (640x480) / QVGA (320x240)
Network Interface	RJ-45/10-100 Base T , 802.11b/g
Network Protocol	TCP/IP, DHCP, SMTP,TP, DDNS, UPNP, PPPoE
Image Transfer Velocity	30frames/sec(QVGA), 15frames/sec(VGA)
Alarm Control	Output: 1channel(5VDC,0.1A); Input: 1 Channel (closed trigger)
Motion Detection	Support
Software Update	Automatic upgrade
Monitoring Mode	IE browse
Playback Mode	Microsoft Media Player
Security	Password protection
Minimum Illumination	0Lux
Automatic white balance	Support
Working Condition	0 - 50C°, 20% - 80%PH
Power Adapter	AC 220V-110V/DC 5V 1A
Power Consumption	3W
Figure Size	100mm×100mm×110mm
Net Weight	0.5Kg

THE 6TH CHAPTER APPENDIX

6.1 RESTORE FACTORY DEFAULT SETTINGS

Sometimes factory default setting can be restored by making use of web page, if users can not enter into web page, the below methods can be followed.

Turn off the power supply, and press the restoration button at the bottom of IP607W, then connect the power supply again, after a few seconds ,the green LED will flash, factory default setting of all parameters can be restored.

6.2 TROUBLE SHOOTING

1、Can not find the device by making use of the searching program.

Please check if there is a correct physical connection? A-B network cable will be required if device connects with the PC directly

2、Can not open the web page.

The IP addresses of PC and the device are not in the same web space, or different subnet mask, or the IP addresses of devices are in conflict. The IP address of PC can not be set up as “automatically obtain IP”.

3、Can view the web page, but no picture.

Please check if the security level setup and the control installation are in the right way.

4、Long-distance browse unavailable

Please check if the setup of the local gateway and the router is in the right way? Namely, the corresponding port of equipment and the mapping of IP address should be set up correctly.

Please check if the security level setup and the control installation are in the right way.

The anti-fire wall has some restrictions on the devices