



FM-2

EXPERIMENTAL BROADCASTING F.M.

The FM-2 module is an experimental emitter, specially designed to start in the amateur field. You could emit in the commercial band from 88 up to 108 MHz. And receive through any radio with F.M band. It could be connected to a mixer, mixing desk, etc... and supplied from 9 up to 15 VDC. We recommend you our FE-2 power supply or a 12 VDC battery. It includes protection against polarity inversions and connection terminals.

TECHNICAL CHARACTERISTICS.

Voltage	12 V. D.C. (from 9 up to 15)
Consumption	150 mA.
Input Sensitivity	300 mV.
Operating Frequency	From 85 to 110 MHz.
Protection Against Polarity Inversions	Yes.
Sizes	78 x 45 x 20 mm.

OPERATING.

POWER SUPPLY OF THE MODULE: The FM-2 circuit had to be supplied by a 12 VDC power supply correctly filtered. Do not use suppliers or rectifiers disturbing the module's operating. Then, we recommended you the FE-2 power supply which has been developed to perfectly answer to the circuit needs or a 12 VDC Battery for mobile applications. Install a fuse and a switch as it is indicated in the drawing. Both are necessary and obligatory to assure a correct module's protection as well as for your own safety as it is indicated in the "CE" regulation. Connect the positive and the negative of the power supply to the corresponding input indicated in the wiring map. Use cable as short as possible. Verify that assembly has been correctly done.


ANTENNA CONNECTION: As antenna for our FM-2 module, you could use any metallic rod with a length of 72 cm. The distance between module and antenna had to be as short as possible and try to install antenna directly to the module output. If you have to use cable for this connection, the cable had to be shielded and inferior than 20 cm. Do not connect module to the power supply if the antenna is not connected to avoid to damage output transistors. The positive cable of the antenna does not touch the enclosure where the module will be installed.

INSTALATION: To obtain a correct operating of the module, it has to be installed in a metallic box and the ground has to be connected.

OPERATING: To adjust the emitter, use a commercial radio with FM. Place it at 3 m away from the FM-2 module and adjust the reception between 100 and 104 MHz. Verify that the antenna is connected to the module and then supply the module. Using a plastic screw- driver adjust the emission frequency thanks to the trimer. When you listen to a noise from the receiver you had to adjust the receiver till there is any noise in the receiver. Then, you could connect the audio input with a signal between 300 mV and 700 mV. If you wish a microphone as input see the paragraph "How to install a microphone".




WIRING MAP.

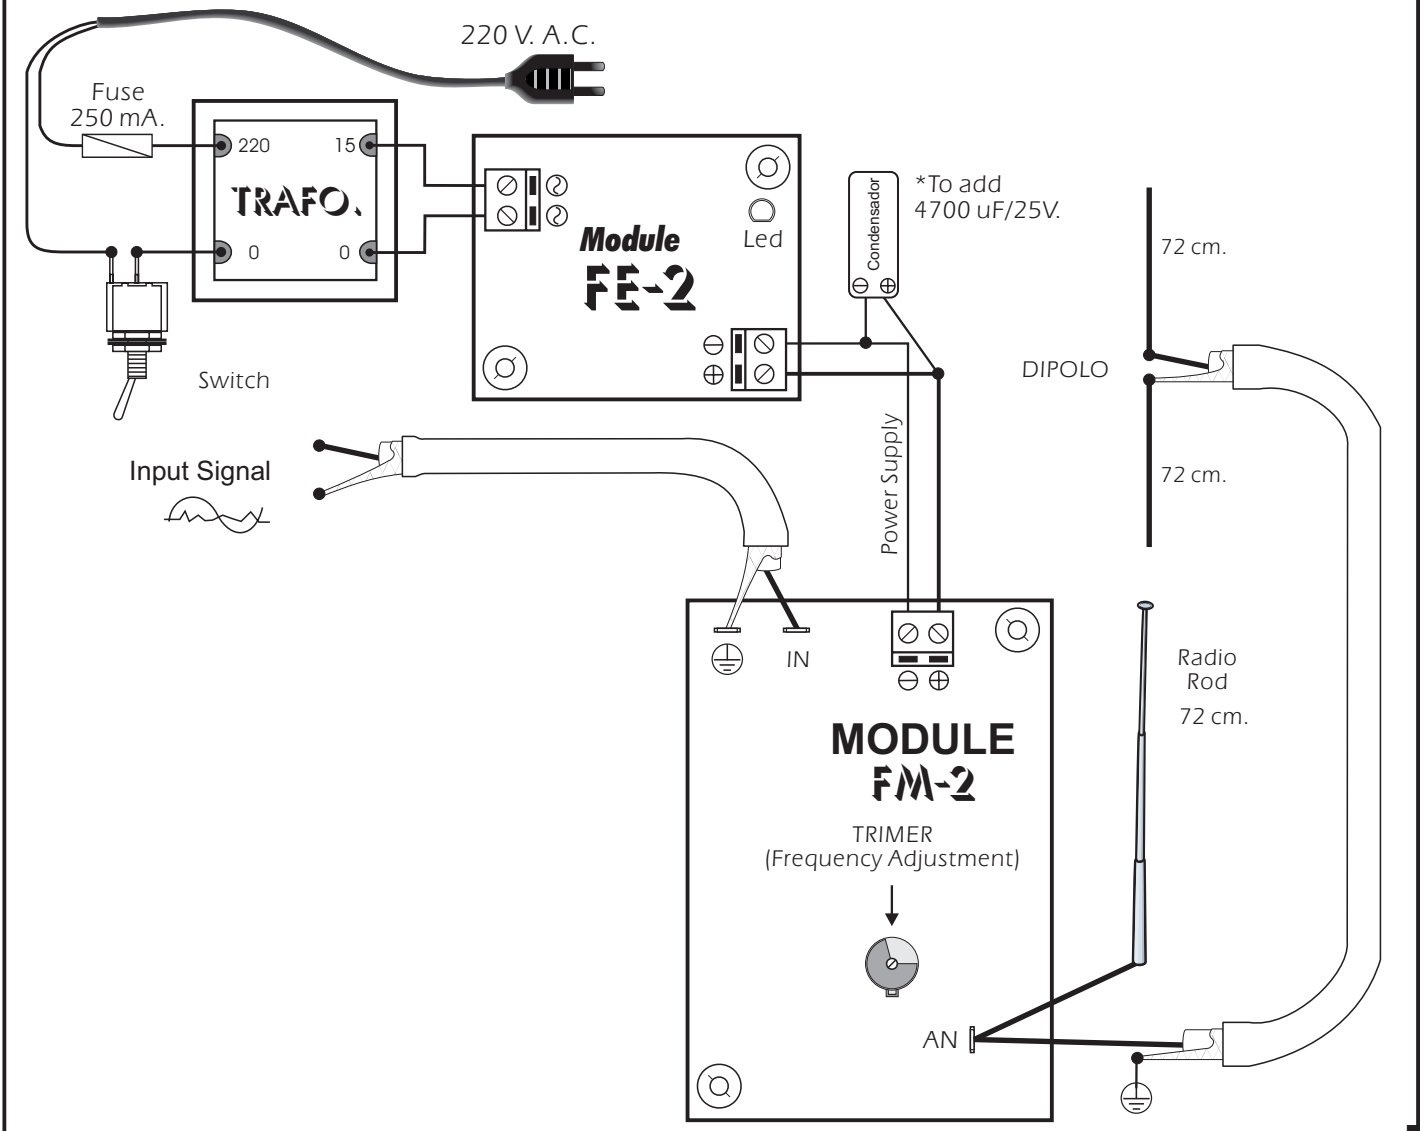

HOW TO INSTALL A MICROPHONE.

To connect a microphone, to our FM-2 module, we suggest you to use an electret microphone. Seeing the drawing you could note that you had to firstly change the C1 capacitor to allow that its negative sign could indicate the negative sign drawn. The, connect a 4K7 resistor between the input IN and the positive of the power supply. Do not forget that the negative of the microphone is the pin connect to its frame.

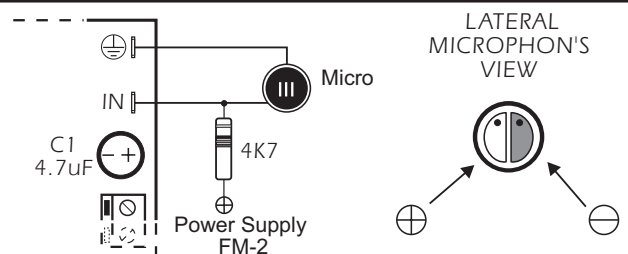

TECHNICAL CONSULTATIONS.

If you have any doubt, you could contact your wholesaler or our Technical Department.

- E-Mail, sat@cebek.com | Fax. 34.93.432.29.95 | by mail. P.O. Box. 23455 - 08080 Barcelona - Spain.

- **Keep the invoice of this module.** For any repair, the corresponding invoice had to be added. If the invoice is not presented together with this module, the module's warranty will be automatically cancelled.



All the module's CEBEK have **3 years of total warranty** in technical repairing, and spaces from the date of buy.

Much more CEBEK module's are available in our products range, please, require our general catalogue or visit our Web side.

[Http://www.cebek.com](http://www.cebek.com)

